www.66.com

ROUTE 66 Mobile 2005

The 1st onboard GPS navigation solution

for Symbian Series 60 Smartphone

User Manual

Version 1.1

September 2004

ROUTE 66: Best by a Mile!

Copyright © 1993-2004 ROUTE 66. All rights reserved. ROUTE 66 and the ROUTE 66 logo are registered trademarks. Data copyright © NAVTEQ B.V. IMPORTANT REMARK: No part of this publication may be multiplied, be stored in a databank and electronically, mechanically, through photocopying, on sound carriers or in any other way be copied, without the explicit written approval of ROUTE 66. Symbian, Symbian OS and other associated Symbian marks are all trademarks of Symbian Ltd. All other marks are the property of their respective owners. The information contained in this document is subject to change without prior notice.

Introduction

"ROUTE 66 Mobile 2005" turns your Symbian smart phone all at a sudden into a powerful navigation system up to house number accuracy! After a short plug & play installation, turn-by-turn voice instructions and on-screen directions will guide you from your current position to the destination that you have entered. You can add any number of intermediate waypoints to your route that you may have selected from your personal contacts, your favourites and your most recent destinations as well. If you miss a turn, then "ROUTE 66 Mobile 2005" immediately recalculates your route. You can automatically download up-to-date traffic information from the ROUTE 66 internet site via a GPRS connection to your smart phone, even when you are on the road. This non-stop FREE service helps you via dynamic routing to avoid traffic jams, road works or accidents and is currently available in Great Britain, Germany, the Netherlands, France and Italy. What's more? You can display the map in night colours to keep a clear view on the road even when you are driving at night or in bird view to display the map as you would see it if you could fly like a bird. In addition to all this, you can navigate to any of the many points-of-interest like hotels, restaurants and petrol stations. You can even dial them directly to make for example a hotel reservation or inquiry before going there! In summary, "ROUTE 66 Mobile 2005" is a must for everyone looking for an affordable, flexible and powerful navigation system!

Contents

The "ROUTE 66 Mobile 2005" kit consists of the following items:

- **Reduced Size (RS) MultiMediaCard plus adapter**. Depending on the product that you have purchased the size of the MultiMediaCard will be 32 MB (Athens), 128 MB (Alps, Benelux and Iberian Peninsula) or 256 MB (Britain, France, Germany, Italy and Scandinavia).

- **Navigation software and entire geographic map** preinstalled on MultiMediaCard
- **Bluetooth GPS receiver**

- **ROUTE 66 lanyard** to wear the Bluetooth GPS receiver around your neck

- **In-car charger cable for Bluetooth GPS receiver**

- **Quick Reference Card** plus **Product key**

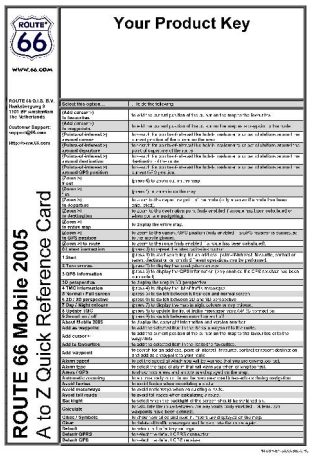

- **ROUTE 66 Mobile 2005 User Manual**

ROUTE 66
www.66.com
Mobile
User Manual • Manuel d'utilisation • Handbuch • Gebruikershandleiding
Manuale d'uso • Manual del usuario • Manual do utilizador
Bruger manual • Bruksanvisning • Brukerveiledning • Manual de utilizare
Symbian Series 60
2005

- Smart phone NOT included in this packaging

Smart phone specifications

Your Symbian smart phone must have the following specifications:

- A free slot for an extra MultiMediaCard or Reduced Size MultiMediaCard
- Bluetooth wireless technology
- Symbian OS v6.1 or higher
- Series 60 platform 1.0 or higher
- Optional: a GPRS connection to download up-to-date traffic information
- For an up-to-date list of compatible smart phones, please consult our website at http://www.66.com
- Not compatible with Symbian UIQ and Windows Mobile

Supported smart phones:

Bluetooth GPS receiver

Features

The Bluetooth GPS receiver has the following features:

- Chipset: SiRF StarII
- High sensitivity 12 channels receiver
- Position accuracy: 10 meters
- Cold/Warm/Hot time-to-first-fix: 45/38/8 seconds
- Reacquisition time: 100 ms
- Supports NMEA-0183 and SiRF protocol
- Compatible with Bluetooth devices with Serial Port Profile (SPP)
- Battery life: > 7 hours
- Dimensions: 70 x 41 x 23 mm
- Weight: 60 grams
- Connection: Bluetooth
- LED display
- Power switch
- RF MCX connector for external GPS antenna
- Manufacturer: RoyalTek Company Ltd.

LED Display

The LED display consists of 3 LEDs that have the following meaning:

- **Battery Status LED (leftmost red/yellow LED)**
  - Red: the battery power is low, charging is required immediately.
  - Yellow: the battery is being charged.
  - Off: the battery is fully charged, the battery has adequate power.
- **GPS Status LED (green LED in the middle)**
  - Flashing green light: the GPS receiver is switched on and the GPS position is fixed.

- Steady green light: the GPS receiver is switched on but the GPS position is not yet fixed.

- **Bluetooth Status LED (rightmost blue LED)**
  - Flashing blue light: the Bluetooth connection is established.

Getting started

To start using “ROUTE 66 Mobile 2005”, you have to carry out the following steps:

- **Step 1: Charge the battery of the Bluetooth GPS receiver**
  1. Before you can use the Bluetooth GPS receiver, the battery has to be fully charged. In order to do so, you have to connect the charger cable to the power jack of the GPS receiver and to plug it into the cigarette lighter outlet of your car. While the battery is being charged, the Battery Status LED will show a yellow light. Note that the Bluetooth GPS receiver standard comes with a fully charged battery.
  2. As soon as the battery is fully charged, the Battery Status LED will turn off. Now you can unplug the charger cable from the GPS receiver and from the cigarette lighter outlet of your car.
- **Step 2: Switch on the Bluetooth GPS receiver and wait for a fixed GPS position**
  1. After you have switched on the Bluetooth GPS receiver, the GPS Status LED will initially show a steady green light to indicate that the GPS position has not been fixed yet.
  2. After the position has been fixed, the GPS Status LED will change into a flashing green light. Now the Bluetooth GPS receiver is ready to be connected to your smart phone.
- **Step 3: Insert the MultiMediaCard into your smart phone and launch “ROUTE 66 Mobile 2005”**
  1. In case your smart phone only supports Reduced Size MultiMediaCards (see the documentation of your smart phone) you have to remove the adapter.
  2. Insert the MultiMediaCard into your smart phone. See the documentation of your smart phone for how to insert the MultiMediaCard.
  3. Switch on your smart phone and launch “ROUTE 66 Mobile 2005”.
- **Step 4: Activate “ROUTE 66 Mobile 2005”**
  1. If you are launching “ROUTE 66 Mobile 2005” for the first time, you are automatically requested to activate the product. See below how to activate your product.
- **Step 5: Start navigating**
  1. Select **Start** from the **Options** menu, enter a search text that contains information about the address where you want to go, press **Options** and select **Search**, select your destination from the list of search results, press **Options** and select **Navigate to**.
  2. As soon as you select **Navigate to**, the smart phone will automatically carry out a search for Bluetooth devices in your neighbourhood. Select the Bluetooth GPS receiver and set it as the **Default GPS** receiver.
  3. After the Bluetooth connection between the smart phone and the Bluetooth GPS receiver has been established, the Bluetooth Status LED will show a flashing blue light and you can start navigating.

Product activation

Before you can start using "ROUTE 66 Mobile 2005”, you have to activate the product first. In order to do this, you should go to the **Applications** view, push the joystick up or down and left or right to select “ROUTE 66 Mobile”, next press **Options** and select **Open**.

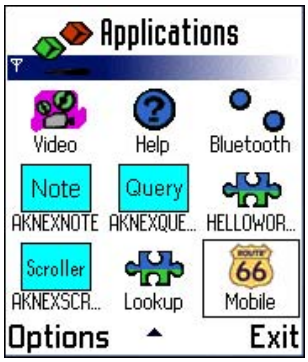

This opens the **Product activation** view.

Product activation
Welcome to product activation. Choose an operation from the Options menu. (Map: United Kingdom & Ireland 1.0)
Options
Exit

You can now press **Options** and select:

- **Preferences** to select the language of the user interface and voice prompts. You should go to **Language** to change the language and to **Select map** to select the map that you want to activate. After you have done so you should press **Back**.

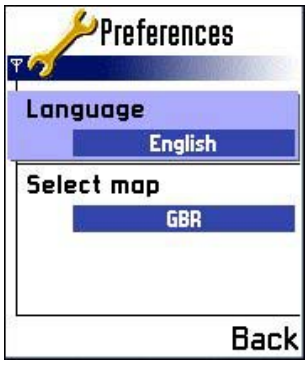

- **Activate via SMS >** to open the view in which you have to enter the **Product key.**

Enter the 8-character **Product key** that you can find on the **Quick Reference Card**. Note that the product key is not case sensitive. If you do not wish to be informed about new ROUTE 66 products and free updates, push the joystick down and press it to deselect the checkbox. Next press **Activate**. A message will be displayed to confirm that your **Product key** was sent via the Short Message Service (SMS) to the ROUTE 66 Product Activation Server.

Depending on your physical location and your network provider, the time between sending the **Product key** to the ROUTE 66 Product Activation Server and receiving the **Activation key** back from the ROUTE 66 Product Activation Server may take up to 15 minutes! During this time the following screen will be shown:

As soon as you receive back the SMS containing the **Activation key**, you will see the following **Disclaimer** text:

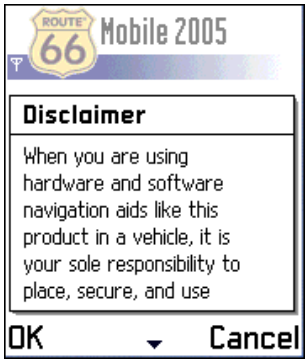
Mobile 2005
Disclaimer
When you are using hardware and software navigation aids like this product in a vehicle, it is your sole responsibility to place, secure, and use
OK
Cancel

Please read the **Disclaimer** carefully and press **OK** to confirm that you agree with it. Next you will be asked if you want to see the **Disclaimer** when launching “ROUTE 66 Mobile 2005” next time:

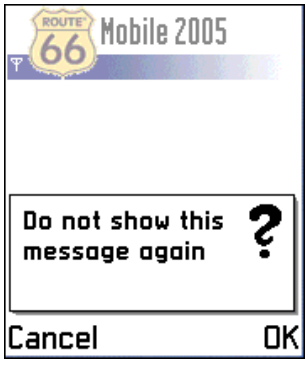

Press **OK** to skip the **Disclaimer** when launching “ROUTE 66 Mobile 2005” again. After you have done so you will see the ROUTE 66 splash screen and you will hear the text “Welcome to ROUTE 66!” at the same time.

This completes the product activation.

Important: please note that the following restrictions apply to the use of the **Product key**:

- You can use the same **Product key** on the same smart phone using different SIM cards as many times as you want.
- You can use the same **Product key** on a second smart phone using different SIM cards only 1 week after the first activation.
- You can use the same **Product key** on a third smart phone using different SIM cards only 1 month after the first activation.
- It is strongly recommended not to delete the SMS containing the **Activation key** so that you can use the same **Activation key** later again.

Description of the menus

Below you can find a description of the menus of “ROUTE 66 Mobile 2005”.

Map view

When you are in the **Map** view, you can press **Options** and select:

- **1 Start*** (press 1) to start searching for an address, point-of-interest, favourite, contact or recent destination on which different operations can be performed (see **Start**).
  * Select this option if you want to start navigating with your Bluetooth GPS receiver to a single destination without any intermediate waypoints.
- **Plan a route**** to define a list of waypoints that can be used for navigation or to calculate a route (see **Plan a route**).
  ** Select this option:
  1. if you want to calculate a route just to obtain a route description. While doing this, your Bluetooth GPS receiver does not have to be connected to your smart phone.
  2. if you want to navigate with your Bluetooth GPS receiver along a route that consists of multiple waypoints.
- **Points-of-interest >** to search for points-of-interest like hotels, restaurants or petrol stations.
  - **around cursor** to search for points-of-interest like hotels, restaurants or petrol stations around the current position of the cursor on the map.
  - **around GPS position** to search for points-of-interest like hotels, restaurants or petrol stations around the current GPS position.
  - **around departure** to search for points-of-interest like hotels, restaurants or petrol stations around the point of departure of the route.
  - **around destination** to search for points-of-interest like hotels, restaurants or petrol stations around the destination of the route.
- **Zoom >**
  - **to GPS position** to zoom to the current GPS position (only enabled if a GPS receiver is connected to the smart phone).
  - **to entire map** to display the entire map.
  - **to route** to zoom to the route (only enabled if a route has been calculated).

- **to departure** to zoom to the departure point of the route (only enabled if a route has been calculated).
- **to destination** to zoom to the destination point (only enabled if a route has been calculated or when you are navigating).
- *** in** (press *) to zoom in on the map.
- **# out** (press #) to zoom out on the map.

- **View >**
  - **2 Turn arrows** (press 2) to display the turn-by-turn arrows (see **Turn arrows**).
  - **GPS Information** (press 3) to display the GPS information (only enabled if a GPS receiver has been connected, see **GPS Information**).
  - **TMC Information** (press 4) to display the list of traffic messages (see **TMC Information**).
  - **Route description** to display the list of driving directions (only enabled if a route has been calculated, see **Route description**).
  - **Legend** to display the list of different map items and their colours (see **Legend**).
  - **About Mobile 2005** to display the copyright information and version number.
- **Preferences** to customize the application (see **Preferences**).

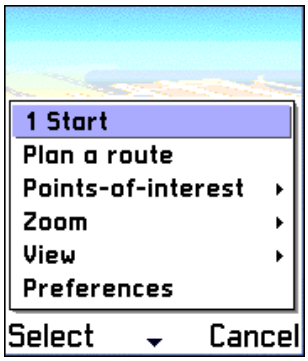

Tip: pressing the joystick reveals some shortcuts. Here they are:

- **Navigate to cursor** to navigate to the current position of the cursor on the map.
- **Add cursor >** to add the current position of the cursor on the map to the favourites or to the waypoints.
- **Information** to display a label with information about a specific item on the map.
- **Preferences** to customize the application (see **Preferences**).
- **5 Normal/Full screen** (press 5) to switch between full screen and normal screen.
- **6 2D/3D perspective** (press 6) to switch between 2D and 3D perspective.
- **7 Day/Night colours** (press 7) to display the map in night colours or day colours.
- **8 Update TMC** (press 8) to update the list of traffic messages via a GPRS connection.
- **9 Sound on/off** (press 9) to switch between sound on and off.
- **0 Latest instruction** (press 0) to repeat the latest voice instruction.

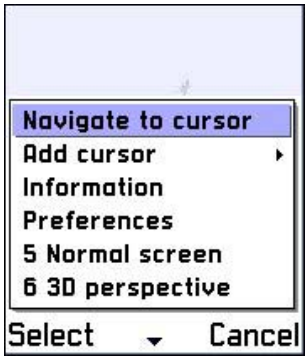

Start

When you are in the **Start** view, you can press **Options** and select:

- **Locations >**

- **Search** to search for an address, point-of-interest or the address of a contact (only enabled if you have entered at least two characters).
- **Navigate to** to navigate to the selected item in the list.
- **Show on map** to display the selected item in the list on the map.
- **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
- **Add to favourites** to add the selected item in the list to the favourites.
- **Route type >** to select the type of the route.

    1. **Fastest/Car** to set the fastest route by car as the type of the route.
    2. **Shortest/Car** to set the shortest route by car as the type of the route.
    3. **Fastest/Lorry** to set the fastest route by lorry as the type of the route.
    4. **Shortest/Lorry** to set the shortest route by lorry as the type of the route.
    5. **Pedestrian** to set the route for pedestrians as the type of the route.

- **Favourites >**
    - **Navigate to** to navigate to the selected item in the list.
    - **Show on map** to display the selected item in the list on the map.
    - **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
    - **Rename** to rename the selected item in the list.
    - **Move up** to shift the selected item one position upward in the list.
    - **Move down** to shift the selected item one position downward in the list.
    - **Delete** to delete the selected item from the list.
    - **Delete all** to delete all items in the list.
    - **Route type >** to select the type of the route.

        1. **Fastest/Car** to set the fastest route by car as the type of the route.
        2. **Shortest/Car** to set the shortest route by car as the type of the route.
        3. **Fastest/Lorry** to set the fastest route by lorry as the type of the route.
        4. **Shortest/Lorry** to set the shortest route by lorry as the type of the route.
        5. **Pedestrian** to set the route for pedestrians as the type of the route.

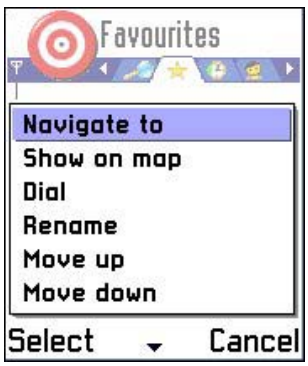

Tip: by changing the order of the tabs you can customize the application in such a way that you only need a few key strokes on your smart phone to start navigating. For example if you

have made **Favourites** the first tab, then pressing “1”, followed by “9” makes you start navigating to the 9th destination in your **Favourites** list.

- **History >**
  - **Navigate to** to navigate to the selected item in the list.
  - **Show on map** to display the selected item in the list on the map.
  - **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
  - **Add to favourites** to add the selected item in the list to the favourites.
  - **Move up** to shift the selected item one position upward in the list.
  - **Move down** to shift the selected item one position downward in the list.
  - **Delete** to delete the selected item from the list.
  - **Delete all** to delete all items in the list.
  - **Route type >** to select the type of the route.

    1. **Fastest/Car** to set the fastest route by car as the type of the route.
    2. **Shortest/Car** to set the shortest route by car as the type of the route.
    3. **Fastest/Lorry** to set the fastest route by lorry as the type of the route.
    4. **Shortest/Lorry** to set the shortest route by lorry as the type of the route.
    5. **Pedestrian** to set the route for pedestrians as the type of the route.

Tip: by changing the order of the tabs you can customize the application in such a way that you only need a few key strokes on your smart phone to start navigating. For example if you have made **History** the first tab, then pressing “1”, followed by “9” makes you start navigating to the 9th destination in your **History** list.

- **Contacts >**
  - **Look up address** to look up the address of a contact.

Plan a route

Remark: select this option:

1. if you want to calculate a route just to obtain a route description. While doing this, your Bluetooth GPS receiver does not have to be connected to your smart phone.
2. if you want to navigate with your Bluetooth GPS receiver along a route that consists of multiple waypoints.

Tip: select **Start** if you want to start navigating with your Bluetooth GPS receiver to a single destination without any intermediate waypoints.

When you are in the **Plan a route** view, you can press **Options** and select:

- **Add waypoint** to search for an address, point-of-interest, favourite, contact or recent destination (see **Add waypoint**) and add as a waypoint to your route.
- **Calculate** to calculate the route between the waypoints (only enabled if at least two waypoints have been defined).
- **Route type >** to select the type of the route.

    1. **Fastest/Car** to set the fastest route by car as the type of the route.
    2. **Shortest/Car** to set the shortest route by car as the type of the route.
    3. **Fastest/Lorry** to set the fastest route by lorry as the type of the route.
    4. **Shortest/Lorry** to set the shortest route by lorry as the type of the route.
    5. **Pedestrian** to set the route for pedestrians as the type of the route.

- **Move up** to shift the selected item one position upward in the list.
- **Move down** to shift the selected item one position downward in the list.
- **Delete** to delete the selected item from the list.
- **Delete all** to delete all items in the list.
- **Save route** to save the waypoints of the route for later use.
- **Open route** to open a route that you have saved before.

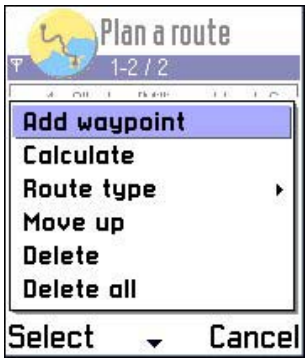

Tip: pressing the joystick reveals some shortcuts. Here they are:

- **Add waypoint** to search for an address, point-of-interest, favourite, contact or recent destination (see **Add waypoint**) and add as a waypoint to your route.
- **Calculate** to calculate the route between the waypoints (only enabled if at least two waypoints have been defined).

Add waypoint

When you are in the **Add waypoint** view, you can press **Options** and select:

- **Locations >**

- **Search** to search for an address, point-of-interest or the address of a contact (only enabled if you have entered at least two characters).
- **Add as waypoint** to add the selected item in the list as a waypoint to the route.
- **Show on map** to display the selected item in the list on the map.
- **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
- **Add to favourites** to add the selected item in the list to the favourites.

- **Favourites >**
  - **Add as waypoint** to add the selected item in the list as a waypoint to the route.
  - **Show on map** to display the selected item in the list on the map.
  - **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
  - **Rename** to rename the selected item in the list.
  - **Move up** to shift the selected item one position upward in the list.
  - **Move down** to shift the selected item one position downward in the list.
  - **Delete** to delete the selected item from the list.
  - **Delete all** to delete all items in the list.

- **History >**
  - **Add as waypoint** to add the selected item in the list as a waypoint to the route.
  - **Show on map** to display the selected item in the list on the map.
  - **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
  - **Add to favourites** to add the selected item in the list to the favourites.
  - **Move up** to shift the selected item one position upward in the list.
  - **Move down** to shift the selected item one position downward in the list.
  - **Delete** to delete the selected item from the list.
  - **Delete all** to delete all items in the list.

- **Contacts >**
  - **Look up address** to look up the address of a contact.

Select

When you are in the **Select** view and you have selected the radius in which you want to search for selected categories of points of interest, you can press **Options** and select:

- **Navigate to** to navigate to the selected item in the list.
- **Show on map** to display the selected item in the list on the map.
- **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).
- **Add to favourites** to add the selected item in the list to the favourites.
- **Add as waypoint** to add the selected item in the list as a waypoint to the route.

Turn arrows

When you are in the **Turn arrows** view, you can push the joystick up or down to step forward or backward through the route and to simultaneously hear the voice instructions.

Tip: pressing the joystick reveals some shortcuts. Here they are:

- **5 Normal/Full screen** (press 5) to switch between full screen and normal screen.
- **9 Sound on/off** (press 9) to switch between sound on and off.

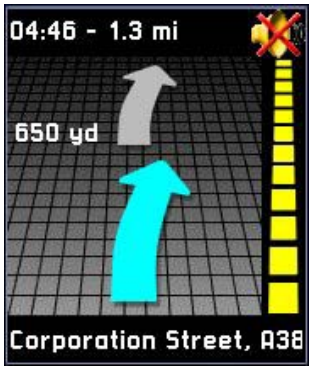

GPS Information

When you are in the **GPS Information** view, you can monitor GPS data like the geographic coordinates, number of visible satellites, driving speed, driving direction, altitude, date and time.

TMC Information

When you are in the **TMC Information** view, you can press **Options** and select:

- **Update** to update the list of traffic messages via a GPRS connection.

- **Show on map** to display the selected item in the list on the map.

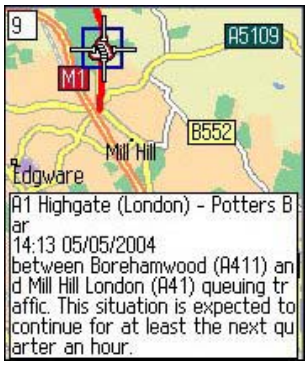

- **Clear** to delete all traffic messages and calculate the route again.

Traffic information is available for selected countries and selected products (see the table below).

Product title	Availability of traffic information
ROUTE 66 Mobile Alpenländer 2005 ROUTE 66 Mobile Pays Alpins 2005	No
ROUTE 66 Mobile Athens 2005	No
ROUTE 66 Mobile Benelux 2005 ROUTE 66 Mobile Bénélux 2005	The Netherlands
ROUTE 66 Mobile Britain 2005	United Kingdom
ROUTE 66 Mobile Deutschland 2005	Germany
ROUTE 66 Mobile France 2005	France
ROUTE 66 Mobile Italia 2005	Italy
ROUTE 66 Mobile Península Ibérica 2005	No
ROUTE 66 Mobile Skandinavien 2005 ROUTE 66 Mobile Skandinavia 2005	No

Route description

When you are in the **Route description** view, you can press **Options** and select:

- **Show on map** to display the selected item in the list on the map.
- **Dial** to directly dial the phone number of the selected item in the list (only enabled if a phone number is available).

Legend

When you are in the **Legend** view, you can select:

- **Cities/Symbols** to show how cities and road numbers are displayed on the map.

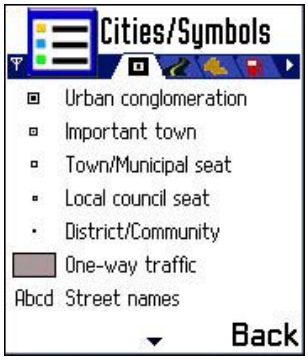

- **Roads** to show how different types of roads are displayed on the map.

- **Areas/GPS** to show how areas and arrows are displayed on the map.

- **Icons** to show how points-of-interest are displayed on the map.

Preferences

When you are in the **Preferences** view, you can select:

- **General >**
  - **Full screen** to display the application on the entire screen (On/Off).
  - **Backlight** to select when the backlight of the screen should be switched on (Always on/During navigation/Always off).
  - **Volume** to adjust the volume of the voice instructions.
  - **Language** to select the language of the user interface and voice instructions.
  - **Units** to select the distance units (Kilometres/Miles).
  - **Order of tabs** to change the order of the Locations, Favourites, Contacts and History tabs.

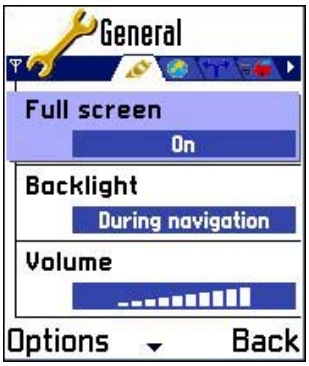

Tip: by changing the order of the tabs you can customize the application in such a way that you only need a few key strokes on your smart phone to start navigating. For example if you have made **Favourites** the first tab, then pressing "1", followed by "9" makes you start navigating to the 9th destination in your **Favourites** list. Of course you create a similar behaviour with the destinations listed in the **History** list.

- **Map >**
  - **Night colours** to display the map in night colours (On/Off).
  - **Show favourites** to display the favourites on the map (On/Off).
  - **Points-of-interest** to select which categories of points-of-interest you want to display on the map.
  - **Rotate map** to rotate the map in the direction in which you are driving during navigation (**On/Off**).
  - **3D perspective** to display the map in 3D perspective (On/Off).
  - **Viewing angle** to adjust the angle under which the map is displayed in 3D perspective.
  - **Scale** to display the scale on the map (On/Off).
  - **Select map** to select which map you want to use.

- **Navigation >**
  - **Route type** to select the type of the route (Fastest/Car, Shortest/Car, Fastest/Lorry, Shortest/Lorry, Pedestrian).
  - **TMC interval** to select the update interval of the traffic messages (Never, 10/20/30 minutes).
  - **Default GPS** to select the default GPS receiver.
  - **Default GPRS** to select the default GPRS connection (On/Off).
  - **Avoid motorways** to avoid motorways when calculating a route (On/Off).
  - **Avoid toll roads** to avoid toll roads when calculating a route (On/Off).
  - **Avoid ferries** to avoid ferries when calculating a route (On/Off).
  - **Time indication** to display the estimated time of arrival or remaining travel time (Arrival time/Travel time).
  - **Automatic zooming** to automatically zoom in on the map near road intersections during navigation (On/Off).
  - **Safety speed** to adjust the speed at which the arrows instead of the map are displayed.
  - **Alarm speed** to set the speed at which you will be warned that you are driving too fast.
  - **Alarm type** to select the type of alarm that will warn you when driving too fast (Acoustic alarm/Visual alarm).

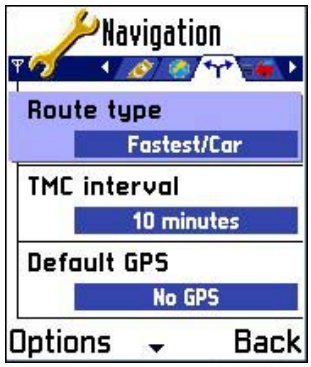

- **Speed >**
  to adjust the speeds on different types of road to reflect your personal style of driving.

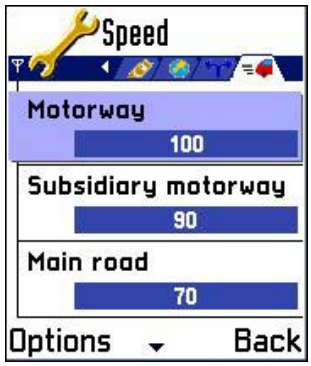

Customer Support

If you have any questions regarding the use of “ROUTE 66 Mobile 2005”, please send an e-mail to support@66.com. You can also visit the ROUTE 66 web site (http://www.66.com/) from time to time in order to stay informed about free updates and our latest offers.

License agreement

This is a legal agreement between you, the end user, and ROUTE 66 Geographic Information BV, Ridderkerk, The Netherlands ("ROUTE 66").

IF YOU DO NOT AGREE TO THE TERMS OF THIS AGREEMENT, PROMPTLY RETURN THE CD-ROM/FLOPPY DISK/MEMORY CARD/DOWNLOAD PACKAGE, THE HARDWARE AND ACCOMPANYING ITEMS - PROVIDED THEY HAVE NOT BEEN USED - TO THE PLACE YOU OBTAINED THEM. IF YOU HAVE ALREADY PAID FOR THE SOFTWARE AND/OR HARDWARE ROUTE 66 OR ITS AUTHORIZED DISTRIBUTOR FROM WHOM YOU OBTAINED THE SOFTWARE AND/OR HARDWARE, WILL REFUND YOU THE PURCHASE PRICE PROVIDED YOU PROVIDE ROUTE 66 WITH PROOF OF PURCHASE AND PAYMENT.

BY BREAKING THE SEAL OF THE CD-ROM/FLOPPY DISK/MEMORY CARD, PRESSING THE "I AGREE" BUTTON FOR A DOWNLOAD, OR BY USING THE SOFTWARE AND/OR HARDWARE YOU ARE AGREEING TO BE BOUND BY THE TERMS OF THIS AGREEMENT.

YOU REPRESENT AND WARRANT THAT YOU HAVE THE RIGHT AND THE AUTHORITY TO ENTER INTO THIS LICENSE AGREEMENT AND THAT YOU ARE OVER THE AGE OF MAJORITY. IF NOT, YOU MAY NOT USE THE SOFTWARE AND/OR HARDWARE.

The License is subject to Law of the Netherlands and the District Court of Rotterdam is the only competent court for disputes related to this License or the use of the Software and/or Hardware. The United Nations Convention on Contracts for the International Sales of Goods is hereby excluded from application to this License.

1) GRANT OF LICENSE: This ROUTE 66 License Agreement ("License") permits you to use the ROUTE 66 computer program and the digital (map) data included in the accompanying package acquired with this License on any single computer, provided the Software is installed on only one computer at any time and provided the Software is combined only with one (1) navigation system. This License is non-exclusive and non-transferable.

This License does not imply any rights to future upgrades or updates of the Software. The use of any upgrades or updates of the Software is governed by this License and may be subject to additional payments.

2) COPYRIGHT: The copyrights and other intellectual or proprietary rights to the Software and Hardware are owned by ROUTE 66 or its suppliers. You may either (a) make one copy of the Software solely for backup or archival purposes, or (b) transfer the Software to a single medium provided you keep the original solely for backup or archival purposes. You may not copy the product manual(s) or written materials accompanying the Software. You only become the owner of the material data carrier and you do not acquire the ownership of the Software.

3) OTHER RESTRICTIONS: The hiring, lending, public performance and broadcasting of Software and Hardware are prohibited. You are not permitted to fully or partly modify the Software, to analyze it by means of reverse-engineering, to decompile or disassemble the Software, or to make products derived from it. If you wish to obtain information that is necessary to ensure the interoperability of the Software with third party software, please contact ROUTE 66 at support@66.com. You are explicitly prohibited from downloading the digital maps and programs contained in the Software or from transferring these to another data carrier or computer.

4) CONFIDENTIALITY: You acknowledge and agree that the Hardware and Software was developed at considerable time and expense by ROUTE 66 and is confidential to and a trade secret of ROUTE 66. You agree to maintain the Software in strict confidence and not to disclose or provide access thereto to any person. If you would nevertheless grant another person (unauthorized) access to the Hardware and/or Software, you guarantee that such person accepts the terms and conditions of this License and you will indemnify ROUTE 66 and its authorized distributors against any claim of such person.

MANUFACTURER'S LIMITED WARRANTY AND LIMITATION OF LIABILITY:

1) You may only use the Software and Hardware after having read the instructions supplied with it before you use it. If you have any difficulty using the Software and Hardware, consult the instructions to check you are using it correctly.

2) The use of the Software and Hardware in a navigation system means that calculation errors can occur, caused by local environmental conditions and/or incomplete data. ROUTE 66 cannot warrant that the ROUTE 66 product and data carrier operates error-free.

3) ROUTE 66 warrants to you that the Hardware will be free from defects in workmanship and materials for a period that is the shorter of (a) one (1) year from the date that the Hardware was first purchased by you and (b) the period ending upon your breach of any term of the License ("Warranty Period"). During the Warranty Period the Hardware will be repaired or replaced at ROUTE 66's option ("Limited Warranty"), without charge to you for either part or labour. This warranty covers the prompt replacement of the data carrier only. If the Hardware is repaired or replaced during the Warranty Period, the Warranty Period will expire five (5) months from the date of replacement or repair. This Limited Warranty does not apply to normal wear and tear, if the Hardware is opened or repaired by someone not authorized by ROUTE 66 and does not cover repair or replacement of any Hardware or part thereof damaged by: misuse, moisture, liquids, proximity or exposure to heat and accident, abuse, non-compliance with the instructions supplied with the Software and/or Hardware, neglect or misapplication. The Limited Warranty does not cover physical damage to the surface of the Hardware.

4) Repair or replacement of the Hardware is the exclusive remedy provided to you. This Limited Warranty is in lieu of all other warranties, express or implied, including any implied warranty or condition of merchantability and/or quality or fitness for a particular use or purpose and/or any implied warranty or condition of non-infringement. Neither ROUTE 66 nor any authorized distributor of ROUTE 66 shall in any way be liable to you and you hereby waive any direct, indirect, economic, special, commercial, incidental, exemplary or consequential damages (including without limitation), lost profits, loss of business revenue or earnings, lost data, damages caused by delay or failure to realize expected savings (arising from or in connection with the use or performance of the Software and/or Hardware, even if ROUTE 66 or an authorized distributor of ROUTE 66 are aware of the possibility of such damages). This limitation is intended to apply and does apply without regard to whether such damages are claimed, ascertained or brought in an action or claim sounding in tort (including negligence) of contract, or other warranty, or any other law or form of action. In no event shall ROUTE 66's liability to you or to any third party claiming through you, exceed the purchase price of the Hardware and/or Software you purchase. This Limited Warranty shall not exclude or limit the liability of ROUTE 66 for death or personal injury caused by the negligence of ROUTE 66, in jurisdictions which do not allow such exclusion or limitation.

5) You cannot transfer this Limited Warranty to another person.

6) This Limited Warranty gives you specific legal rights and you may also have other rights that vary from country to country. Some countries may not allow the exclusion or limitation of damages. If this Limited Warranty is held to be invalid or unenforceable, such invalidity or unenforceability shall not invalidate or render unenforceable the entire Limited Warranty, but rather the Limited Warranty shall be construed as if not containing the particular invalid or unenforceable provision or provisions, and the rights and obligations of each party shall be construed and enforced accordingly.